

3D PROPHET
ALL-IN-WONDER®
Series

Remote Control

Installation Instructions



Remote Control Installation Instructions

Control TV, DVD, and video features of your 3D Prophet ALL-IN-WONDER® product. The Remote Control unit replaces all the functionality of a mouse in software applications.



To install your Remote Control unit

- 1 Open the battery container on the back of the remote control, and insert 4 AAA batteries.
- 2 Install your Multimedia Center software, then restart your computer.
- 3 Plug the remote receiver into any available USB port on your computer. Your computer will detect the receiver, and will install the driver.
- 4 When the driver has been installed, restart your computer. The Remote Control icon will appear on the Windows taskbar.
















USB Ports

The following table lists all the Remote Control functions.

Feature						
Button	TV	DVD	Video CD	File Player	CD Audio	Windows
	The thumbpad controls cursor movement in all modes.					
POWER	Power Off			Alt+F4		
TV	Focus on TV	Launch TV				
DVD	Launch DVD	Focus on DVD	Launch DVD			
WEB	Launch Browser					
	Launch Media Library					
	Minimize/restore the foreground window, if applicable.					
	Increase/decrease volume					Increase/decrease volume*
	Channel up/down	no action				
MUTE	Toggle mute					Toggle mute*
0 - 9	Numeric keys					
	no action	Open root menu	no action			
	Open Setup menu					no action

Remote Control Installation Instructions

Button	Feature					
	TV	DVD	Video CD	File Player	CD Audio	Windows
	Up arrow key					
	Down arrow key					
	Right arrow key					
	Left arrow key					
	Press Enter	Enter / navigation select	Press Enter			
	Play in TV-On-Demand mode	Play				Play*
	Enter TV-On-Demand mode	Pause				Pause*
	Exit TV-On-Demand mode	Stop				Stop*
	Rewind in TV-On-Demand mode	Rewind				Skip to previous track*
	Fast-forward in TV-On-Demand mode	Fast-forward				Skip to next track*
	Record	no action				
	Drag (toggles holding down the left mouse button)					
A, B, C, D, E, F	Programmable buttons. To program the buttons, right-click the Remote Control icon in the system tray.					
	Toggle TV-On-Demand mode	no action				

*This function is only supported by Windows applications that respond to WM_APPCOMMAND

Note: The Remote Control's range is subject to conditions: 9 m is not guaranteed for all users in all environments. For best results, the receiver should be placed as far as possible from the computer's case and monitor.